



Gateway KAV60 LT2016U LCD Replacement

This guide will help you learn how to replace your netbook screen.

Written By: My Linh Pham



INTRODUCTION

LCD (liquid crystal display) is another term to use for display in computer or technology device. LCD is need to replace if the screen was not on or if it is damage by any other factor like water, crack by contacting to the hard surface.

LCD damage can make a laptop unusable, so it is necessary to replace it as soon you could.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery




- Unlock the button in the top left on the back of the laptop (So the red is showing).

Step 2



- The battery should be able to be removed easily now.

Step 3 — Upper Cover

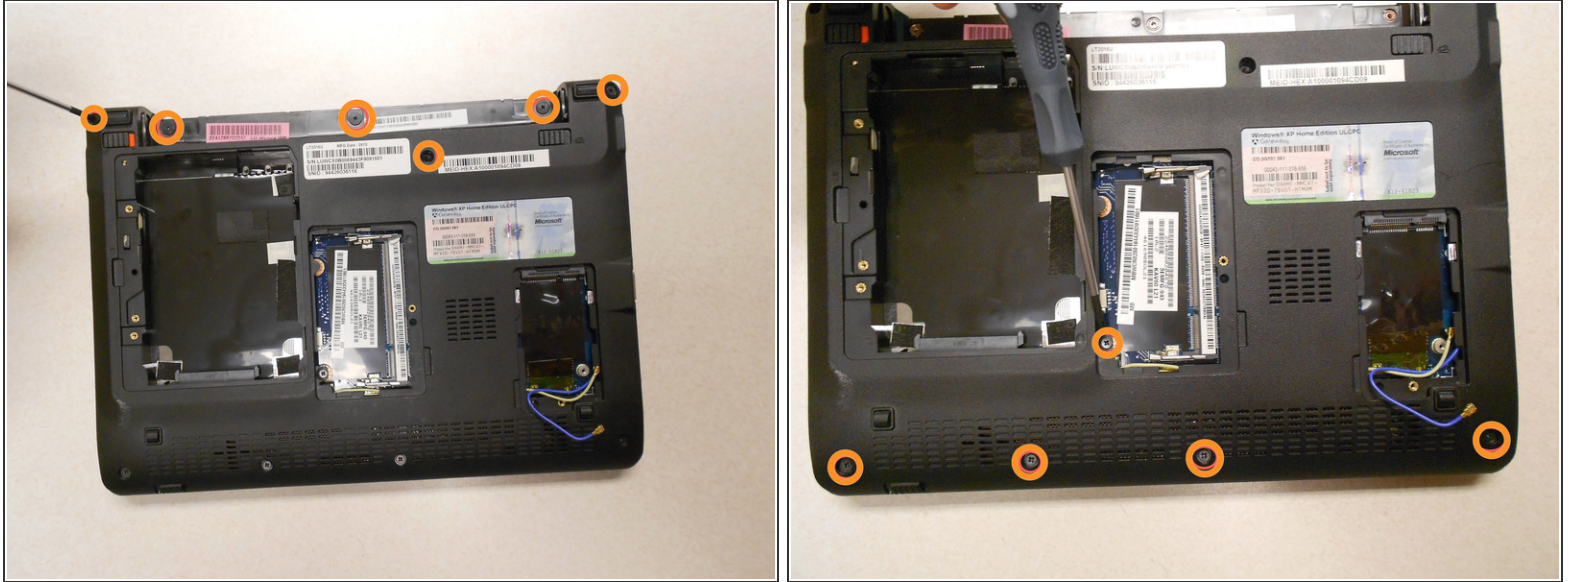

- Using the Phillips #0 screwdriver, remove six (6) 5mm screws, two (2) 17.5mm screws, and three (3) 2.5mm screws from the back cover, as marked here.

Step 4





- Pry off the keyboard by placing your plastic opening tool on the center of the top row of keys, as shown in the photograph.
- If the plastic opening tool bends or slips, use something sturdier, such as the Phillips #0 screwdriver.
- Remove the keyboard.

Step 5



- Remove the five (5) 5mm screws shown here using the Phillips #0 screwdriver.

Step 6

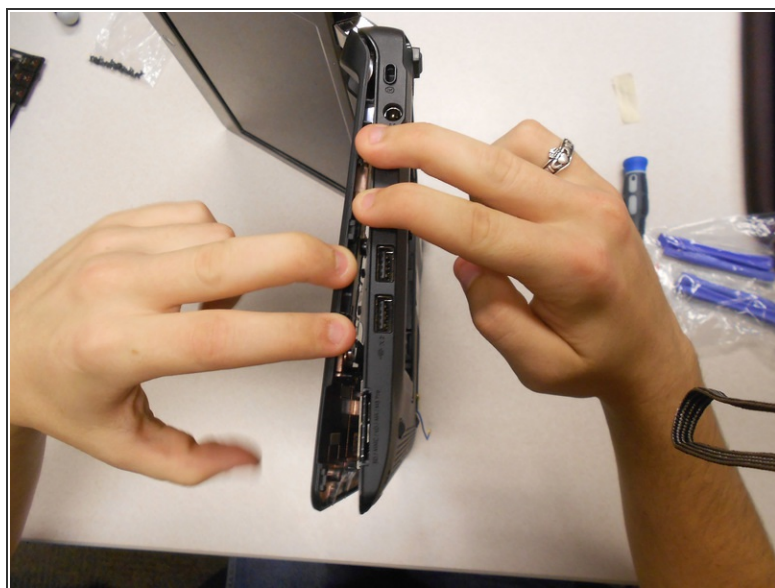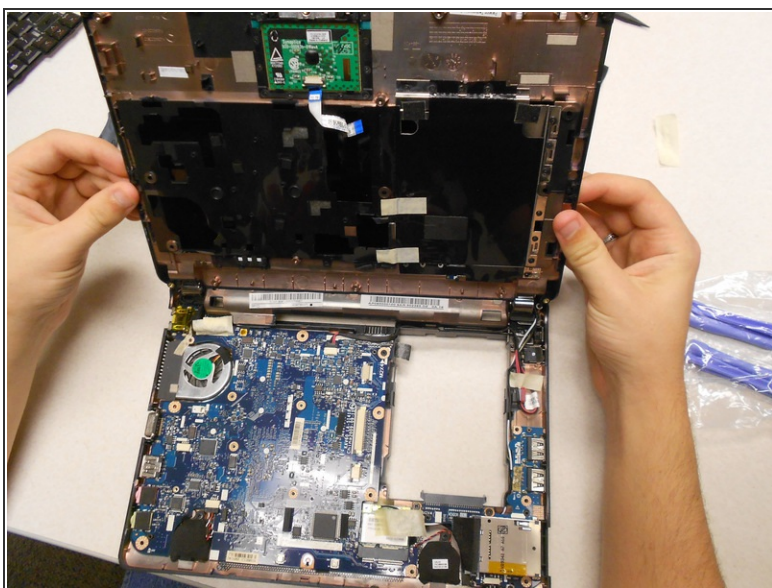


- Separate the upper cover from the back cover. It is possible to do this without a tool, but you may also use a plastic opening tool for added leverage.
- Be careful to keep even pressure all the way around the cover so that it is not bent beyond repair.

Step 7 — LCD




- Pry the border around the monitor off of the top cover using a plastic opening tool, as shown.
- Be careful not to damage the computer screen in the process.

Step 8

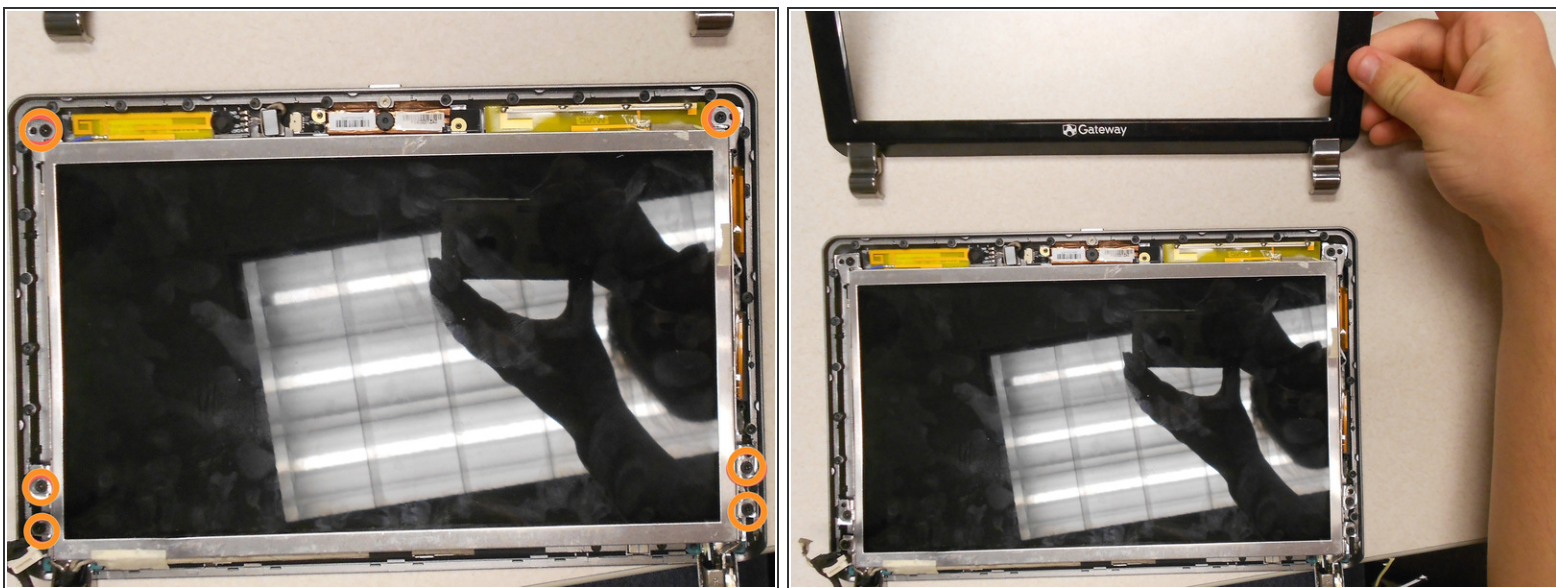


- Separate the monitor from the border cover once all snap connections have been pried apart.

Step 9

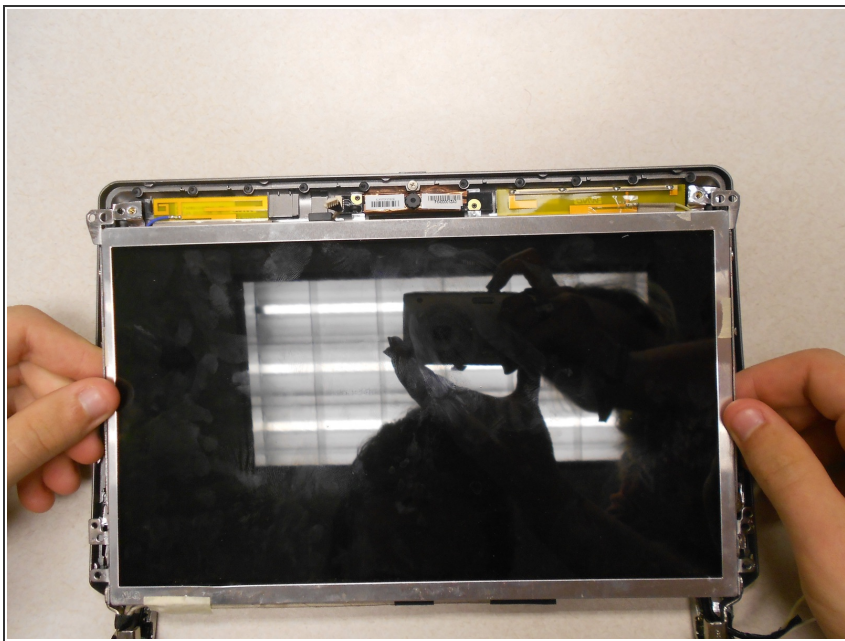

- Remove the six (6) 5mm screws shown here using the Phillips #0 screwdriver.

Step 10

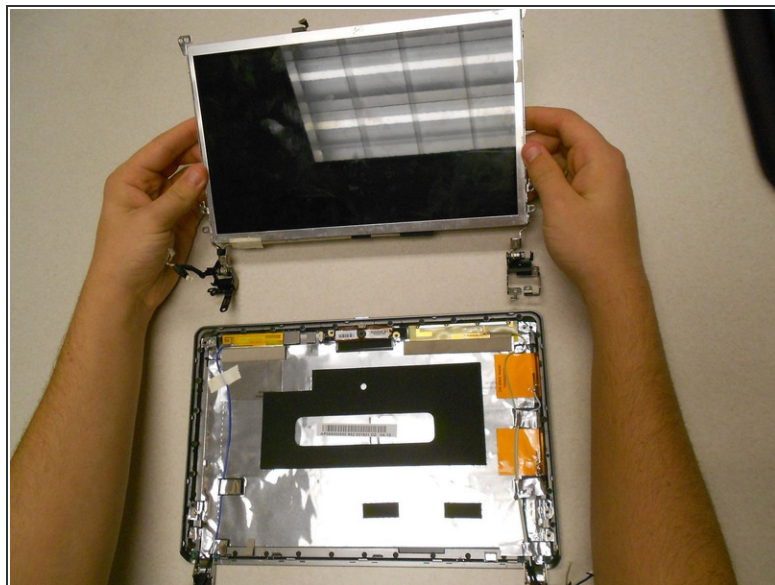

- Take the screen out of the top cover.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-20 01:16:21 PM.

